VYNCO

INSTALLATION INSTRUCTIONS

VHBC – CYPRUS CERAMIC BATHROOM HEATER VHBCS – VHBCW – VHBCB

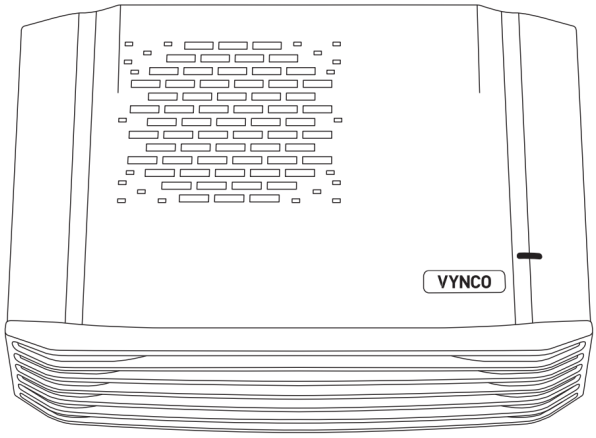

PRODUCT & TECHNICAL SPECIFICATIONS	
Appliance Class	Class 1 – earth required
Rated Voltage	220-240V AC
Rated Frequency	50 Hz
Rated Power	1800-2000 W
Power Control / Adjustment	Step Down Thermostat – High (2000W) Low (800W)
Temperature Protection	Dual Thermal Fuses
Wiring	Hard Wired - Phase, Neutral and Earth
IP Rating	IP20
Product Approvals/ Compliance	**AS/NZS60335.2.30 & AS/NZS60335.1**
Suitable for indoor use. For all other specifications for the Cyprus heating range, refer to our website, www.vynco.co.nz	

PRODUCT SIZING – ALL MODELS	
Height (mm)	210
Width (mm)	300
Depth (mm)	120

DISCLAIMER

Specifications are subject to change without notice

SAFETY INFORMATION

Please read all instructions prior to installation of this product.

- When using any electrical appliance, safety precautions should always be observed. Read these instructions carefully and take note of warnings outlined.
- This product contains no user serviceable parts. Under no circumstances should an unauthorized person open the heater to adjust or repair any electrical or mechanical functions.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction
- Children being supervised not to play with the appliance.
- Do NOT use this appliance other than for its intended use.
- Use this appliance only with the voltage specified on the rating label.
- Be very careful not to touch hot surfaces or moving parts.
- Do NOT probe any opening to remove fluff. To ensure trouble-free performance, the appliance shall be isolated from the power supply and a vacuum cleaner used to remove dust and fluff from the inlet and outlet grilles regularly.
- Do NOT use the heater if there are visible signs of damage to the heater.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly agent or similarly qualified persons in order to avoid a hazard.

  Contact a qualified electrician to service.

VYNCO INDUSTRIES (NZ) LIMITED

CHRISTCHURCH
388 Tuam Street, Phillipstown, Christchurch, 8011
PO Box 9022, Tower Junction, Christchurch 8149
New Zealand
P +64 3 379 9283
E sales@vynco.co.nz

AUCKLAND
9 Levene Place, Mount Wellington
PO Box 12 249, Penrose, Auckland 1061
New Zealand
P +64 9 525 6051

VYNCO.CO.NZ

VYNCO

INSTALLATION INSTRUCTIONS

VHBC – CYPRUS CERAMIC BATHROOM HEATER VHBCS – VHBCW – VHBCB

MOUNTING DETAILS – ALL MODELS

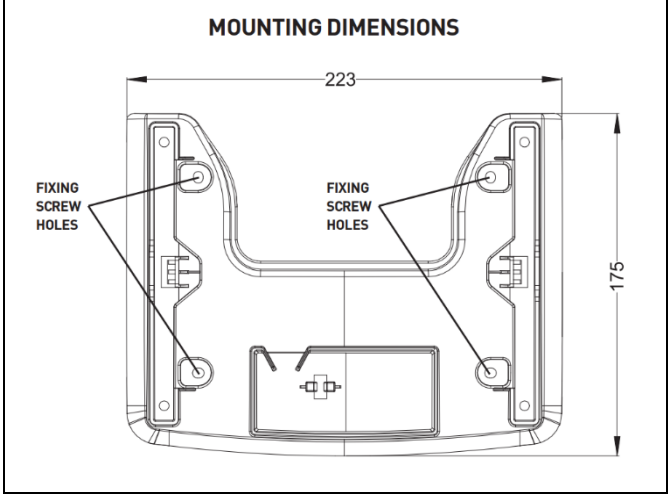

WIRING

L = Phase	Brown
N = Neutral	Blue
E = Earth	Yellow/Green

WARRANTY

This warranty protects against defects in workmanship and material. Any defects will be rectified by replacement if the goods are returned to place of purchase, with proof of purchase, and with a brief explanation of the experienced fault.

This warranty does not include compensation for any associated expenses involving installations or removal, such as labour or travel.

This warranty becomes null and void if, in our opinion, the product has been misused, tampered with, incorrectly installed, or subjected to power surges.

IMPORTANT

WARNING: NEVER LEAVE THIS HEATER UNATTENDED WHEN IN USE.

WARNING: HEATER IS NOT LOCATED IMMEDIATELY BELOW A SOCKET-OUTLET

WARNING: THE HEATER IS TO BE INSTALLED SO THAT SWITCHES AND OTHER CONTROLS CANNOT BE TOUCHED BY A PERSON IN THE BATH OR SHOWER.

WARNING: IN ORDER TO AVOID OVERHEATING HAZARDS, DO NOT COVER THE HEATER.

INSTALLATION INSTRUCTIONS

The installation must be performed by a licensed electrician.

This appliance MUST be installed in accordance with the local wiring rules and regulations which covers the installation of appliances and accessories in damp situations, such as bathrooms, showers, laundries and other areas.

To attach the heater to the wall:

1. Remove the wall mounting bracket from the heater by using a blade screwdriver to release the retaining bracket clips away.
2. Secure the mounting bracket with all four fixing points to the wall. Use the four fixing screws and wall plugs supplied or suitable alternatives for mounting. The wall mounting bracket supplied must be installed with the heater.
3. Secure the heater onto the mounting bracket and make sure both the clips are fully engaged and locked in position.
4. Connect the supply cord to fixed mains supply behind a suitable wall box and cover.

Refer to the wiring markings/colours.

NOTE: Means for electrical disconnection must be incorporated in fixed wiring.

VYNCO INDUSTRIES (NZ) LIMITED

CHRISTCHURCH
388 Tuam Street, Phillipstown, Christchurch, 8011
PO Box 9022, Tower Junction, Christchurch 8149
New Zealand
P +64 3 379 9283
E sales@vynco.co.nz

AUCKLAND
9 Levene Place, Mount Wellington
PO Box 12 249, Penrose, Auckland 1061
New Zealand
P +64 9 525 6051

VYNCO.CO.NZ

VYNCO

INSTALLATION INSTRUCTIONS

VHBC – CYPRUS CERAMIC BATHROOM HEATER VHBCS – VHBCW – VHBCB

MOUNTING DISTANCES

See attached diagram - the heater must be mounted at a minimum distance of:

- 1850mm above the floor
- 210mm below the ceiling
- 300mm from adjacent walls
- 700mm between the heater and any objects heated below it.
- 1000mm clearance from any flammable materials

Note: This product is supplied without a plug

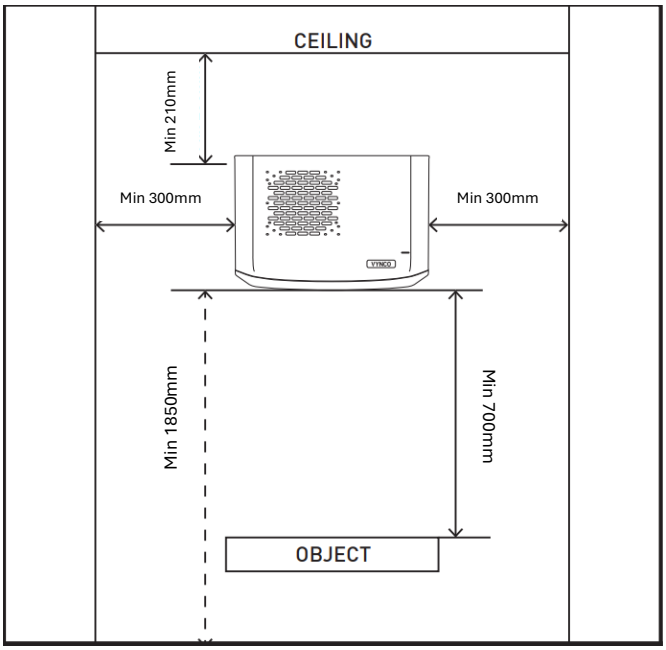

WARNING: The heater is at least one metre (1000mm) away from any flammable materials including, textiles, curtains or other combustible materials.

OPERATION

DO NOT OPERATE THE HEATER UNATTENDED

- To operate with the pull cord, pull the cord to switch the heater ON. Pull the pull cord again to switch the heater OFF.
  The blue LED indicator is ON to show its working status.
- The heater has an automatic thermostat which will reduce the output from 2000 Watts to 800 Watts once the room reaches a comfortable temperature.
  If the room temperature drops, it automatically returns to full power.

CARE & MAINTENANCE

- The heater is best wiped down from time to time with a damp cloth. Do not use any abrasive cleaners.
- The heater requires regular cleaning (yearly or every 6 months if in a dusty environment) to ensure trouble free operation.
- Isolate the heater from the mains supply before carrying out any cleaning.
- Use a vacuum cleaner to remove dust and fluff visible on the heater inlet and outlet grilles.
- There is no requirement to remove the heater cover to clean the internal parts.
- Ensure the heater is dry before turning the heater back on.

SAFETY CUTOUT

Your Vynco VHBC Series Wall & Bathroom Fan Heater is fitted with dual thermal safety fuses designed to permanently shut down the heater in the event of abnormal temperature.

Should this occur –

- Switch off the heater
- Contact a qualified technician

VYNCO INDUSTRIES (NZ) LIMITED

CHRISTCHURCH
388 Tuam Street, Phillipstown, Christchurch, 8011
PO Box 9022, Tower Junction, Christchurch 8149
New Zealand
P +64 3 379 9283
E sales@vynco.co.nz
VYNCO.CO.NZ

AUCKLAND
9 Levene Place, Mount Wellington
PO Box 12 249, Penrose, Auckland 1061
New Zealand
P +64 9 525 6051