




P66SK / P123SK / P126SK - GARCIA LED PANEL SURFACE MOUNT KIT

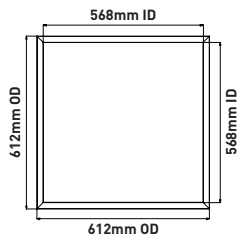

P66SK

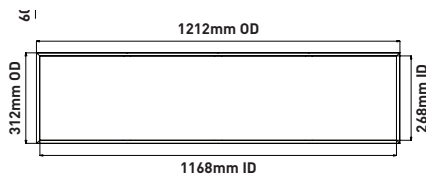

P123SK

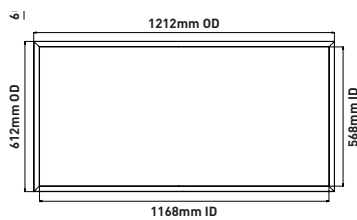

P126SK

SAFETY

Turn off power before installation or before doing any maintenance work.

Do not install any luminaire near a heat source. Take care not to pull any electrical wires during placement and installation.

Lay out all the components on a smooth surface and make sure there are no components missing before assembling.

To avoid injury or damage to the fitting, please ensure that screws are secure before installing light and connecting the power.

This product should be installed by a suitably qualified person in accordance with Australian and New Zealand wiring rules.

WARRANTY

This product is covered by the standard 3 Year Vynco Warranty - proof of purchase is required. Please contact Vynco for details of returns procedure.

NOTE: This product contains NO user serviceable parts.

SPECIFICATIONS

Material	Aluminium
----------	-----------

DIMENSIONS

P66SK	612 x 612mm
P123SK	1212 x 312mm
P126SK	1212 x 612mm

VYNCO INDUSTRIES (NZ) LIMITED

CHRISTCHURCH


388 Tuam Street, Phillipstown, Christchurch, 8011
PO Box 9022, Tower Junction, Christchurch 8149
New Zealand
P +64 3 379 9283 F +64 3 379 6838
E sales@vynco.co.nz

VYNCO.CO.NZ

AUCKLAND

9 Levene Place, Mount Wellington
PO Box 12 249, Penrose, Auckland 1061
New Zealand
P +64 9 525 6051 F +64 9 525 5799

P66SK / P123SK / P126SK - GARCIA LED PANEL SURFACE MOUNT KIT

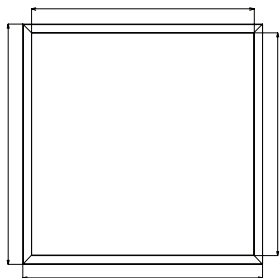

STEP 1


INSTALLATION PROCEDURE

Switch off before installation. Switch on only after complete installation and examination of the circuit and installation.

Turn off power supply before starting any installation. Read instructions, check you have all the tools and accessories to complete the installation correctly.

STEP 1

Fix the kit onto the ceiling with screws provided.

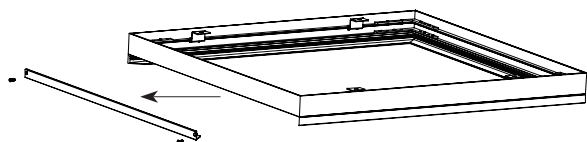


STEP 2

STEP 2

Remove the side frame by unscrewing the side and pull downwards.

STEP 3


Feed the driver connection through the frame. Connect the driver and panel light, push the panel light into the frame.

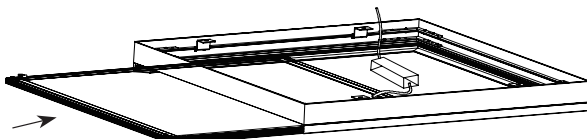

STEP 3

STEP 4

Fix the side of the frame by screw.

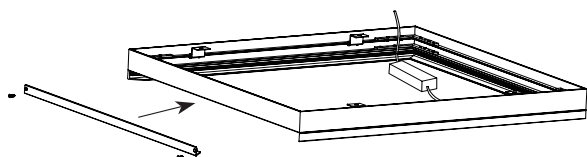

STEP 4