

The conversion brackets (x4) are intended to convert a shallow VMC board into a deep VMC board.


In order to complete the conversion process, 2 additional items are required:

- 1 x Deep cover assembly VMC34DC or VMC51DC
- 1 x VMCB Conversion bracket kit

CONVERSION PROCEDURE


Step 1

Remove all din rails and fold back existing din rail mount until it is flush with the vertical wall of the enclosure.

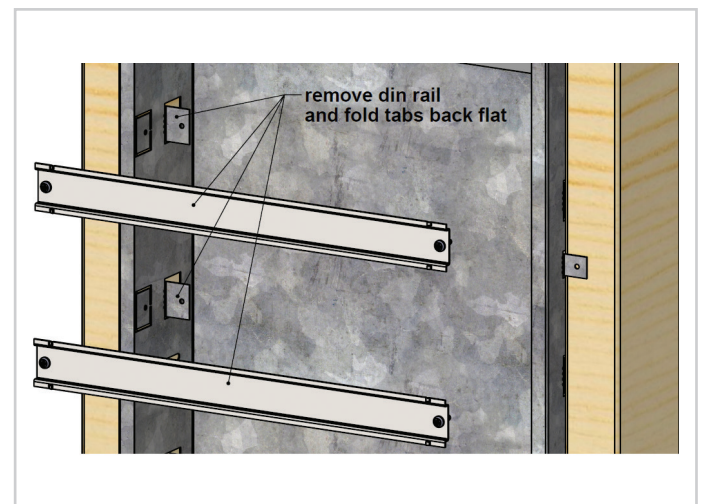

Step 2

Directly above the existing din rail mount, cut the narrow joiner tab with a sharp pair of wire/side cutters and using a screwdriver, lever out the tab to 90 degrees.

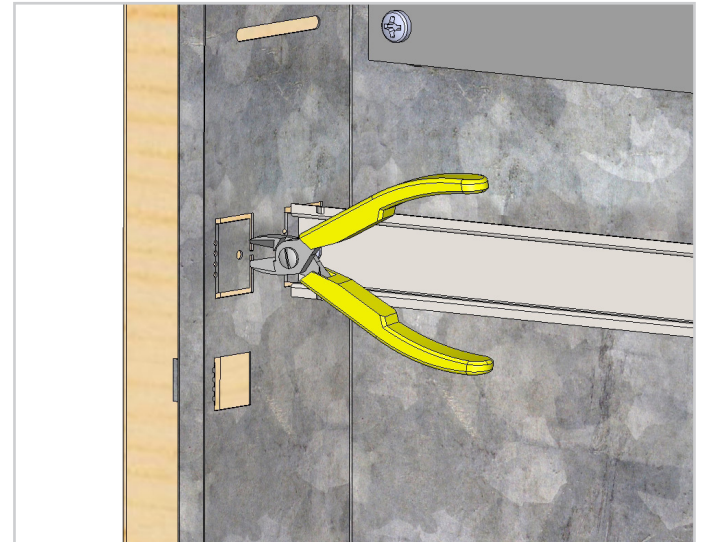


Step 3

Re-attach the din rails using the same screws but DON'T overtighten, otherwise they will strip out.

Step 4

Screw 4xbrackets in position with the No. 8 screws provided. Note that the large flange sits at the bottom. From here, fit out the board as normal.

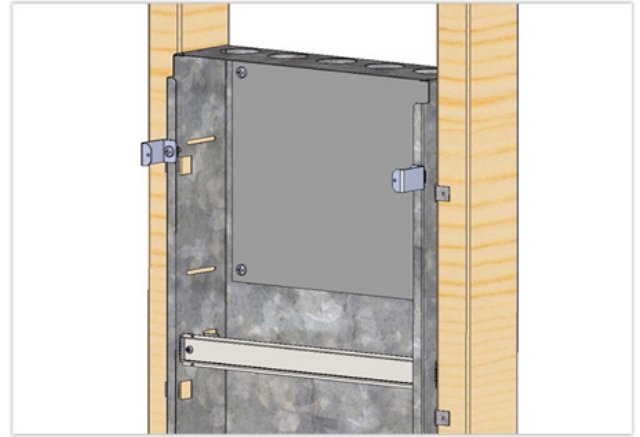

Step 5

When complete, fit deep cover using M4 x 12 screws supplied.



WARRANTY STATEMENT

- The VMCB is guaranteed for a period of 1 year from the date of purchase against defects in workmanship and materials.
- Defects will be rectified by replacement of the product.
- This warranty becomes null and void if in our opinion the product has been misused, incorrectly installed, tampered with, or subject to power surges.
- The warranty does not include any labour or other associated expenses that may be involved in removal or installation of the product.
- To obtain a replacement under this guarantee, return the goods (prepaid) to the place of purchase (proof of purchase must be supplied).

Vynco Industries (NZ) Limited

Christchurch Office

388 Tuam Street, Phillipstown, Christchurch, 8011
PO Box 9022, Tower Junction, Christchurch 8149
New Zealand
P +64 3 379 9283 F +64 3 379 6838
E sales@vynco.co.nz
www.vynco.co.nz

Auckland Office

9 Levene Pl, Mount Wellington
PO Box 12 249, Penrose, Auckland 1061
New Zealand
P +64 9 525 6051 F +64 9 525 5799
E sales@vynco.co.nz
www.vynco.co.nz